


1 **CONNECT**

NOTE: Outputs can run in mono or stereo. Press the **SYSTEM BUTTON** and set the **OUTPUT MODE** accordingly.

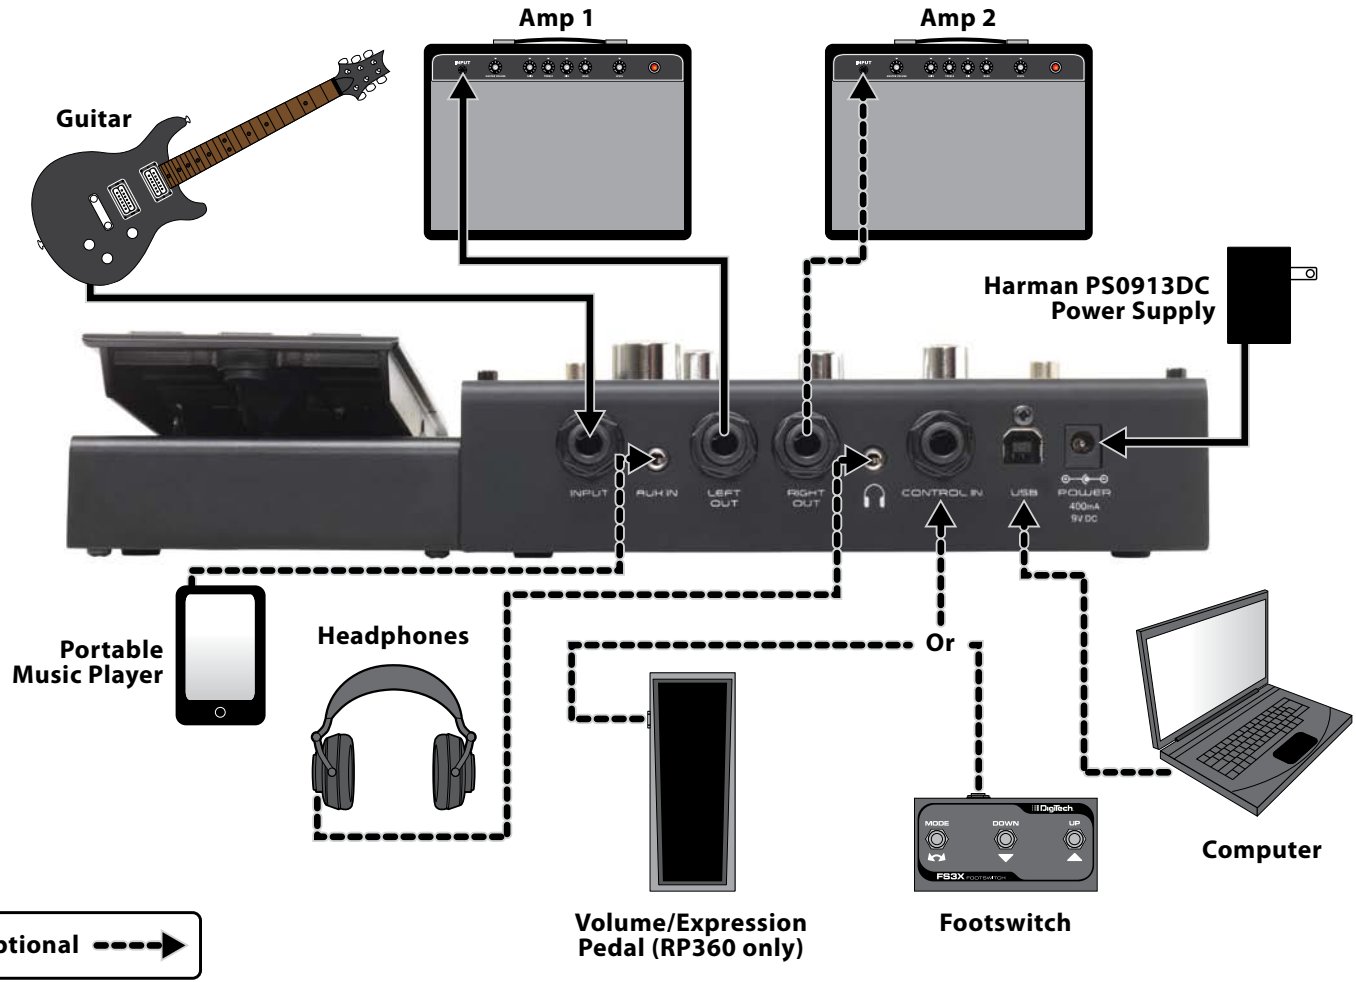

Optional ---->

2 TUNE

- Press and hold the **UP** and **DOWN FOOTSWITCHES** to enter the tuner.
- Tune your guitar.
- Press any **FOOTSWITCH** to exit the tuner.

3 SELECT PRESET

- Press the **UP** or **DOWN FOOTSWITCH** to navigate presets.

4 CUSTOMIZE PRESET

- Press the **SELECT ENCODER** to enter the Edit menu.
- Turn the **SELECT ENCODER** to select the effect to edit.
- Press the **SELECT ENCODER** repeatedly to navigate parameter pages for the selected effect.
- Turn the **EDIT KNOBS** to edit the on-screen parameters.
- Press the **STORE BUTTON** twice to store the changes to a preset.

5 ACTIVATE DRUMS

- Press the **DRUMS BUTTON** twice to activate the built-in drums.

6 RECORD LOOP

- Press the **LOOPER FOOTSWITCH** to arm recording then start playing.
- Press the **LOOPER FOOTSWITCH** again to start loop playback.
- Press the **LOOPER FOOTSWITCH** again to add an overdub.
- Press the **LOOPER FOOTSWITCH** twice to stop playback.
- Press and hold the **LOOPER FOOTSWITCH** to clear the loop.

